



# Nikon Coolpix L820 Settings buttons Replacement

This guide will lead you through the process of accessing and replacing the settings buttons.

Written By: Marc



## INTRODUCTION


This guide will lead you through the necessary steps to replace the settings buttons.

---

### TOOLS:

- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Settings Buttons

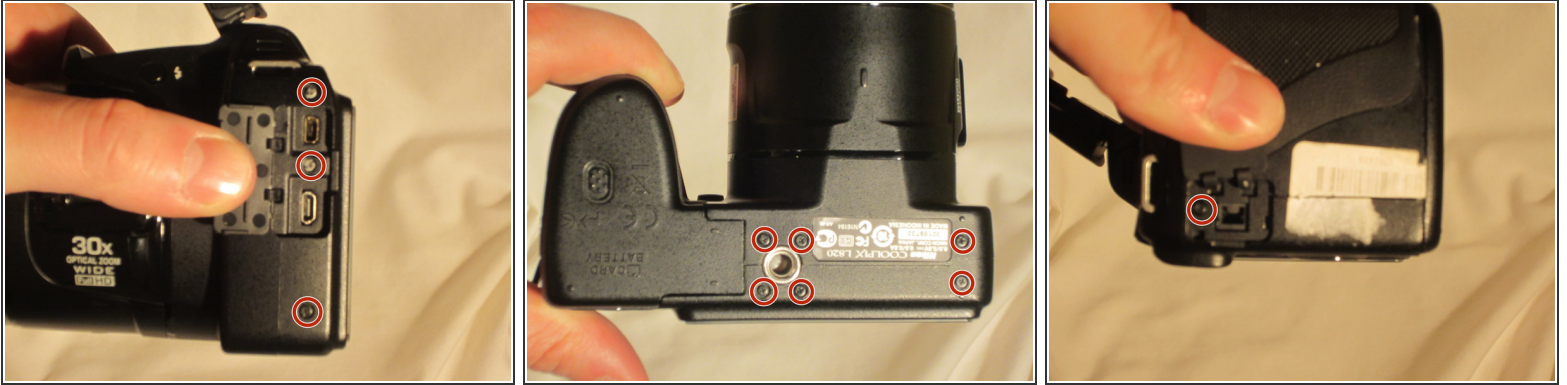

⚠ Remove the battery.

- Begin by removing these ten screws, three on the left side, two on the bottom, and one on the right side of the camera. Use a Phillips size ##0 screwdriver to unscrew these screws. **Not sure of the exact size of the screws.**

## Step 2



- Continue by removing the front top Phillip screw with the screwdriver.
- Opening the empty battery slot on the bottom of the camera, reveals four additional screws.
- Unscrew the four Phillips screws with the screwdriver.



## Step 3



- Using the spudger, move around the casing, carefully separating the rear housing from the camera assembly.
- ⚠ Be sure to only apply pressure to the casing panels and not the sensitive internal electronics.
- Once the rear housing is separated, the settings buttons will be accessible for replacement.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-02 09:36:34 AM.